



# ACR-100\_APP

## Installation Guide




**During the software installation process, do not connect the ACR-100 device with the computer.**

1. Unzip the Zip file.




2. Check the files in the directory "ACR-100\_APP\_Installation". These files should look similar to the figures as shown below:

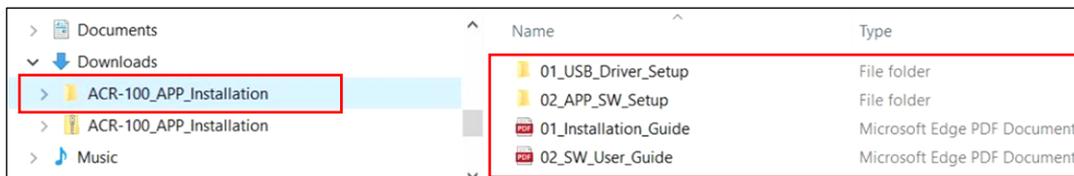


## USB driver installation


1. Double-click the file **CDM21226\_Setup.exe** in the directory "01\_USB\_Driver\_Setup".

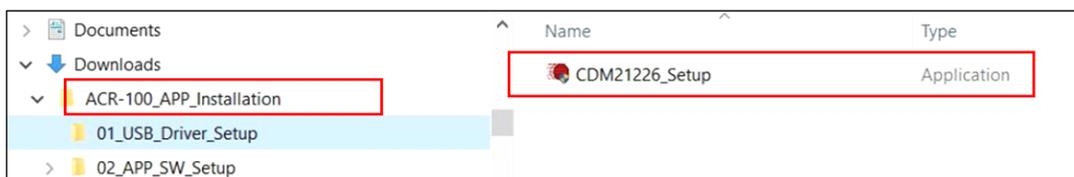


2. Click the button **Extract**

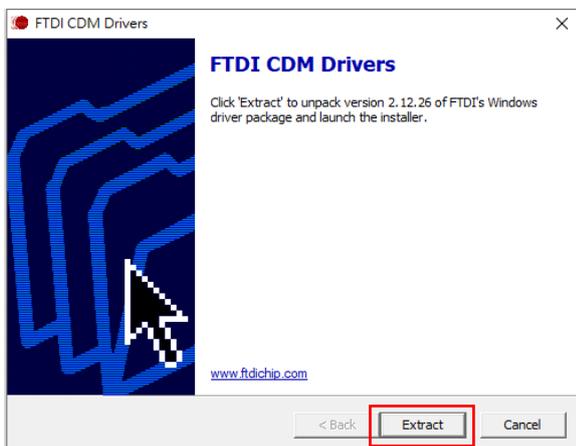


3. Wait for extracting files.

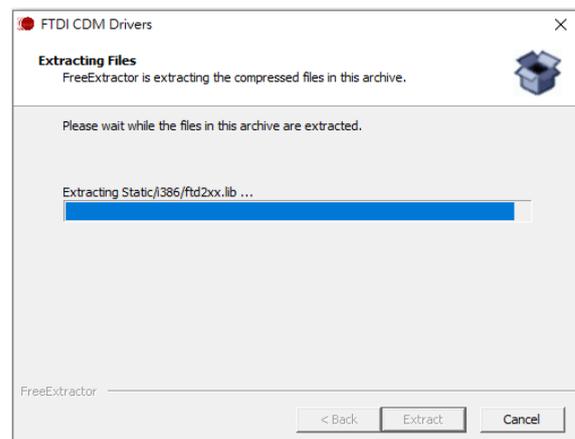


4. Click the button **Next>**

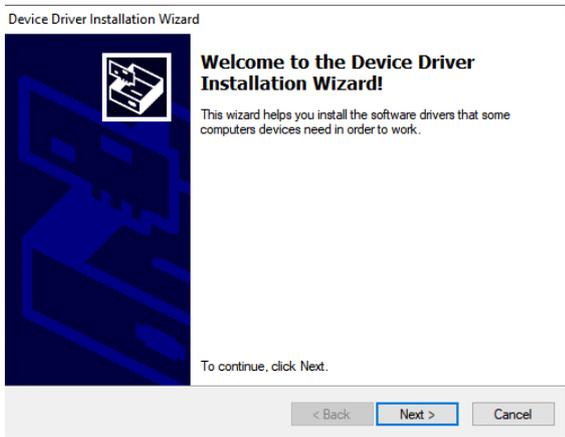

5. Select “I accept this agreement” and click the button **Next>**

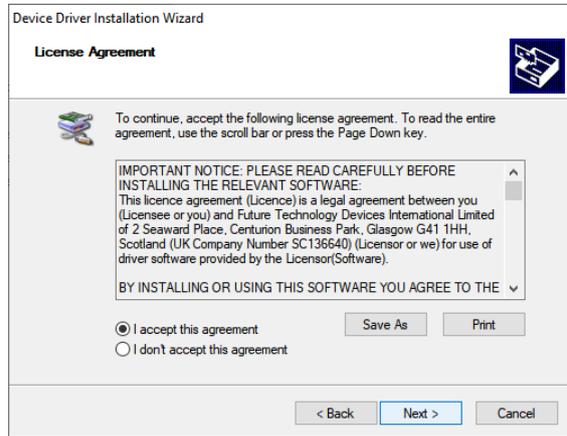


6. Click the button **Finish** when device driver installation process is complete.

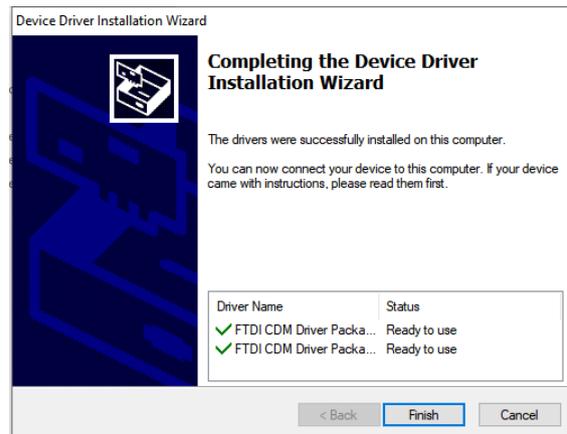

## ACR-100\_APP installation


1. Double-click the file **Setup.exe** in the directory “02\_APP\_SW\_Setup”.

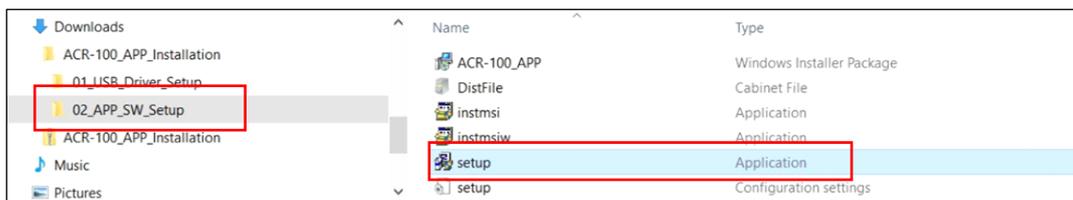


2. Click the button **Next>**




3. Select different destination folder or use default setting. Click the button **Next>**

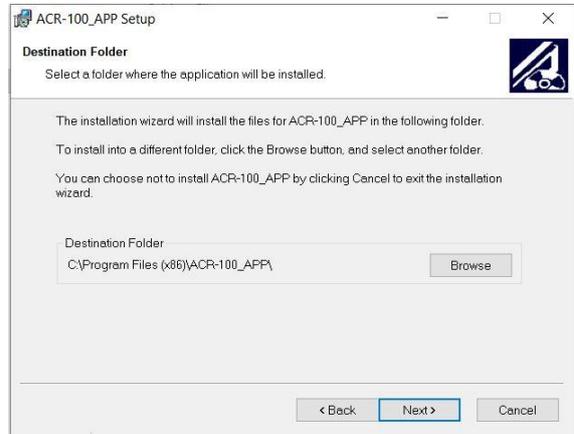

4. Click the button **Next>**

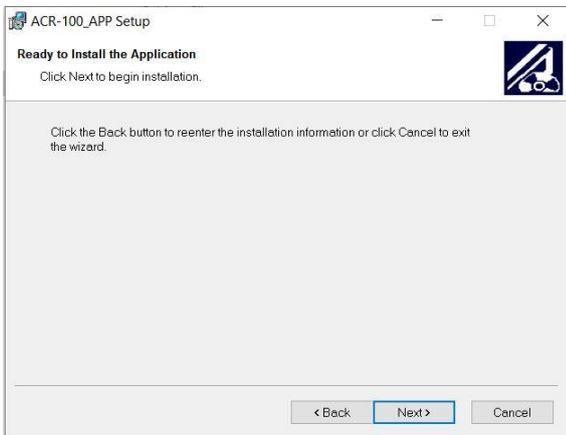

5. Wait for the installation process to finish.

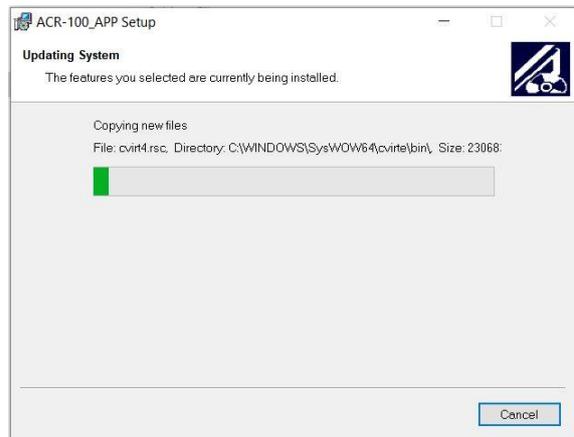

6. Click the button **Finish**



7. Click the button **Yes** to restart the computer now or "No" to manually restart later.

